


START(A KEY)

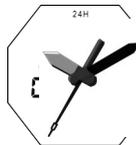

(C KEY)LIGHT

MODE(B KEY)


(D KEY)RESET

### A.Features:

- 10 Digits LCD Display.Display Hour,Minute,Second,Month,Day and Week
- 12/24H format selectable.Auto Calendar.
- Daily Alarm and Chime hourly
- 1/100 second Chronograph with split functions.
- EL backlight

### B.Operational Manual:

- ◆ Press B key to convert MODE:

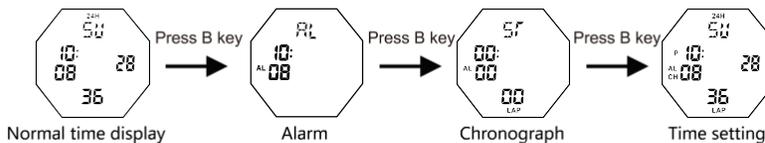

At any mode,press C key the ELback light on for 3 seconds.

- In normal mode,press B key once to enter Alarm mode,then press A to ON/OFF "ALM {j} "/"SIG . "function.
- In normal mode,press B key once to enter Alam mode, then press D key once,"Hour"flashing,press D key once again, "Minute"flashing,press A key, can adjust "Hour" and "Minute" respectively,press B key to normal mode.

### D.Chronograph functions:

- +In normal mode press B key twice Chronograph, Press A to start, Press A again to stop, Press D to zero, Press B to normal model

- +In setting mode and the "Seconds"flashing,press D key, "Hour","Minute", "Month","Date","Week" Flashing successively.Press C key can adjust:Time,Minute,Month,Date,Week.Press B key to normal mode.
- +Press B to the clock mode.

- 1.Pull-out crown to stop the second hands stop.
2. Rotate crown to settle time.
3. After settle the time.push the crown firmly to the normal location.

**This watch is only Splash Resistant.  
Never push button in the water.**